

Odessa Haze660

Item Number: LLOSH660

USER MANUAL



This user manual includes important information for installation and operation. Please read this user manual carefully to install, operate, and maintain the lighting safely and correctly. A verified technician should do the installation and operation.

Please carefully check for any damages caused by transportation.

Before delivery, this device has passed strict quality control and inspection. Please follow the user manual for proper operation. If this fixture is damaged due to operation error or disregard of this manual, the fixture will be out of warranty, and the manufacturer or dealer will not be held responsible.

Installation:

This machine is for indoor use only. Use only in a dry location. To prevent or reduce the risk of electrical shock or fire, do not expose to rain or moisture.

The machine must be placed on level surface (not at a slant or upside down). Keep the fixture at least 1.5ft away from any combustible material, as it is not suitable for direct installation on these surfaces. The unit must be placed or installed in a location with adequate ventilation, at least 20 inches from adjacent surfaces. Keep away from wood carpeted or fabric-oriented surfaces. Ensure that no ventilation slots are blocked.

In the instance of rigging, place the unit vertically and fasten it to the truss or other fixing point.

We advise that an electrician confirms the safety of the electrical data prior to installation. Power off the fixture before installation or maintenance. Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

Read before unboxing:

Laser components are highly sensitive to electrostatic discharge. Direct contact during unboxing may cause damage to the components due to electrostatic release.

Please follow these steps:

- Touch a metal door handle/water pipe for 3 seconds to discharge static electricity from your body.
- Wear an anti-static wrist strap before handling the equipment.
- First, touch the metal part on the outside of the packaging box, then take out the product.
 - It is recommended to operate in an environment with an anti-static table mat.
 - In dry seasons, wipe your hands with wet wipes first.
 - If you find any damage to the packaging, please contact customer service immediately.

Product Specifications:

Voltage used:	AC 220-240V, 50-60Hz Power:660W
Fuse:	5A/250V
Pre-heating time:	0 min
Smoke output:	6000 cubic feet/min Tank capacity:1.5L
Oil consumption:	24h/L
Controller:	2
DMX Channel:	2CH
Packing size:	20.08 × 14.76 × 17.32 in
Gross Weight:	64.93 lbs

Function Setting:

1. Interval Set: spacing interval of regular output (0~200) seconds
2. Duration Set: time of regular output (0~200) seconds
3. DMX512 Address: setting of controller address (1~512)
4. Fan Speed: speed of fan (0~10)

Button Panel Operation:

Function:	Function setting
UP:	Parameter up
Down:	Parameter down
Timer:	On or open button of regular consumption and time
Manual:	Continuous output
Volume:	Manual output

1. Interval Set: spacing interval of regular output (0~200) seconds
2. Duration Set: time of regular output (0~200) seconds
3. DMX512 Address: setting of controller address (1~512)
4. Fan Speed: speed of fan (0~10)

DMX Channel:

2 Channel Mode		
CH1	0-127	Haze Spray Off
	128-255	Haze Spray On
CH2	0-255	Fans speed from slow to fast

Assemble:

Remove all packaging materials in the box, especially the presence of foreign bodies at the nozzle.

Put the smoke engine flat and open the oil drum cover.

High quality smoke agent, such as West German smoke agent, is injected into the barrel and the barrel lid is tightened. Please note that the inferior smoke will damage the tobacco machine.

Fasten the plug in the remote controller to the socket behind the machine.

Operation:

The power cord should be inserted in the power socket with ground wire, and the switch behind it should be turned on to ON position, then the cigarette machine will be turned on.

Before heating, the indicator lights on the remote control are lit.

Press the red button to spray the smoke.

The indicator light on the remote control indicates the condition of the flue gas in the smoke or heating.

There are many kinds of remote controls available for smoking machines. Please refer to the use of remote controls.

The smoking machine can be installed at the height (with a hanger) or on the ground. Please note that smoke engines must not be directed to the human body.

It can be tilted more than 15 degrees.

Safety Warning:

This is for adults. Smoking machine should be installed in places where children can not touch, and always pay attention when using them.

Do not spray directly into the human body. Keep away from fire.

The heat of spray is very high, so the safe distance should be maintained with 100CM above the nozzle. (surface temperature 40-80 C, do not touch).

Smoke machine should be installed in a well-ventilated place, not covering the heat sink hole on the smoke machine to ensure proper ventilation and heat dissipation, and the upper and lower sides of the smoke machine should be protected.

Hold at least 20CM of space and do not store inflammable materials around 300CM. (away from carpet, wood and flammable objects).

Symbol Instruction on Fixture:



CE certificate



RoHS certificate



FCC certificate