

# Odessa MoveWash19

Item Number: LLOSMW19

## USER MANUAL



This user manual includes important information for installation and operation. Please read this user manual carefully to install, operate, and maintain the lighting safely and correctly. A verified technician should do the installation and operation.

Please carefully check for any damages caused by transportation.

Before delivery, this device has passed strict quality control and inspection. Please follow the user manual for proper operation. If this fixture is damaged due to operation error or disregard of this manual, the fixture will be out of warranty, and the manufacturer or dealer will not be held responsible.

### **Installation:**

This unit is for indoor use only. Use only in a dry location. To prevent or reduce the risk of electrical shock or fire, do not expose to rain or moisture. Fixture should be protected from shock, strong vibrations or shaking.

Maximum ambient temperature for operation is between 25°F and 104°F. Do not use under or above this range. Allow the fixture to acclimate to room temperature before turning on or transporting. Turn off the power and allow 15 minutes for the unit to cool down before handling. Do not open the unit within five minutes after switching off.

Keep the fixture at least 1.5ft. away from any combustible material, as it is not suitable for direct installation on these surfaces. The unit must be installed in a location with adequate ventilation, at least 20 inches from adjacent surfaces. Ensure that no ventilation slots are blocked. Do not operate in dusty environments.

We advise that an electrician confirms the safety of the electrical data prior to installation. Power off the fixture before installation or maintenance. Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

## **Rigging:**

Fix the clamp on the truss. Pull the safety rope through the holes on the bottom of the base and fasten it on the truss or other fixing point.

## **Product Specifications:**

Voltage:	AC100V ~ 240V / 50 ~ 60Hz
Output Power:	285W
Light source:	LED 19×15W RGBW color mixing
Zoom angle:	10~60 degrees
Beam angle:	15 degrees
Channel:	24/16 CH
Control mode:	DMX512/Master-Slave/Auto/Sound
Pan/Tilt:	540°/270°
Dimmer:	0-100% Linear dimmer
Product Size:	15.7 × 12.2 × 8.7 in
Product weight:	17.5 lbs
Package Size:	17.7 × 15.0 × 10.6 in
Package weight:	20.9 lbs

## **DMX-512 Connection:**

The fixture is equipped with both 3-pin sockets for DMX input and output. The sockets are wired in parallel.

Only use a shielded twisted-pair cable designed for 3-pin XLR-plugs and connectors to connect the controller with the fixture or one fixture with another.

## DMX - output

XLR mounting-sockets (rear view):




## DMX-input

XLR mounting-plugs (rear view):



Building a serial DMX-chain:

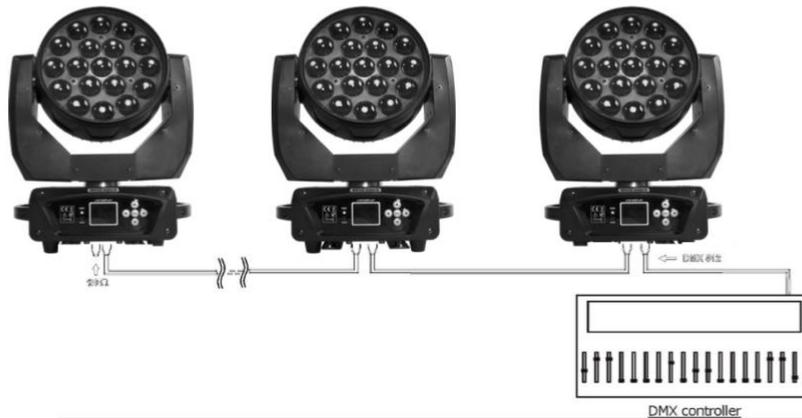

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected. Up to 32 fixtures can be connected.

Caution: At the last fixture, the DMX-cable must be terminated with a terminator.

Solder a 120  $\Omega$  resistor between Signal (-) and Signal (+) into a 3-pin (5-pin) XLR-plug and plug it in the DMX-output of the last fixture.

## Control Menu:



- [←] used to move back to the previous screen

- [↑] used to move up on the previous page.

- [↓] used to move down on the next page.

- [ENTER] used to save adjusted values, to leave menu or to perform desired action.

Turn on the fixture, press the MENU button to enter the menu mode, use the UP/DOWN button to find the menu, when the preset menu is displayed on the display, press the ENTER button to confirm, use the UP/DOWN button to select the submenu, press the ENTER button to save the setting or Automatically return to the previous menu. Press the MENU button to return or wait for 30 seconds to automatically exit the menu mode.

Menu	Value	Function
Menu	1.Reverse	Pan/Tilt reverse
	2.Mic Sense	Sound Control Sensitive
	3.No Signal Mode	Run mode when No Signal
	4.Reset	Reset system
	5.Default	Default value
	6.Factory Set	Set password
Address	001-512	Set the DMX start address.
Disp		Reverse display
En/Ch		English or Chinese
Mode	1.DMX512	Run DMX512 mode
	2.Fast Auto	Run Fast Auto mode
	3.Slow Auto	Run Slow Auto mode
	4.Sound	Run Sound Control Mode
16CH	1. 16/24 Channels	Set 16/24 Channels mode
	2. 24 Channels	Set 24 Channels mode

### **DMX512 Mode:**

Enter the Mode, select DMX512, press the OK button to confirm, use the ↑↓ buttons to run DMX512 mode.

### **DMX Address Code:**

Select the Address, press the OK button to confirm, the current DMX address will be displayed on the display. Use the ↑↓ button to select the address 001~512 and press the OK button to save. Press the ← button to return to the previous menu or wait 30 seconds to automatically exit the menu mode.

### **DMX Last State:**

Select the last state of DMX, press the OK button to confirm, the current mode will be displayed on the display, select by the ↑↓ button: standby (the fixture will enter standby mode when the DMX signal stops), hold (the fixture will keep the last when the DMX signal stops the machine) State) or manual (after selecting this mode, the machine will automatically read the parameters in the "manual mode" mode for operation), press the OK button to save. Press the ← button to return to the previous menu or wait 30 seconds to automatically exit the menu mode.

### **Observe the DMX channel value:**

Select to observe the DMX channel value, press the OK button to confirm, the current channel and its value will be displayed on the screen. Use the ↑↓ button to view other channel values. Press the ← button to return to the previous menu or wait 30 seconds to automatically exit the menu mode.

### **Auto Mode:**

Select Mode-Fast Auto or Slow Auto press the ENTER button to confirm, the current mode will be displayed on the display, press the OK button to run mode. wait 30 seconds to automatically exit the menu mode.

### **Sound control Mode:**

Select Mode-Sound press the OK button to confirm the current mode will be displayed on the display and use the ↑↓ button to select. wait 30 seconds to automatically exit the menu mode.

### **Pan Movement Reverse:**

Select Menu-Pan press the OK button to confirm, the current mode will be displayed on the display and use the  $\uparrow\downarrow$  button to select: Yes or No, press the OK button to save. Press the  $\leftarrow$  button to return to the previous menu or wait 30 seconds to automatically exit the menu mode.

### **Tilt Movement Reserve:**

Select Menu-Tilt press the ENTER button to confirm, the current mode will be displayed on the display and use the  $\uparrow\downarrow$  button to select: Yes or No, press the OK button to save. Press the  $\leftarrow$  button to return to the previous menu or wait 30 seconds to automatically exit the menu mode.

### **DMX Channel:**

<b>16 Channel Mode</b>		
Channel	Value	Features
CH1	0-255	Pan movement by 540°
CH2	0-255	Fine control of pan movement
CH3	0-255	Tilt movement by 270°
CH4	0-255	Fine control of tilt movement
CH5	0-255	Pan/Tilt speed, Pan/Tilt time
CH6	0-255	Dimming
CH7	0-255	Strobe
CH8	0-255	Red Dimmer
CH9	0-255	Green Dimmer
CH10	0-255	Blue Dimmer
CH11	0-255	White Dimmer
CH12	0-255	Zoom
CH13	000-127	Preset Color
	128-145	Program Jump
	146-159	Program Gradient
	160-172	Program Pulse

	173-200	Effect Mode 1
	201-230	Effect Mode 2
	231-255	Effect Mode 3
CH14	0-255	Program speed adjustment
CH15	010-099	Activation CH13
	100-150	Self-propelled Mode (1)
	150-179	Self-propelled Mode (2)
	180-255	Voice control Mode
CH16	0-255	Reset

### 24 Channel Mode

Channel	Value	Function
CH1	0-255	Pan movement by 540°
CH2	0-255	Fine control of pan movement
CH3	0-255	Tilt movement by 270°
CH4	0-255	Fine control of tilt movement
CH5	0-255	Pan/Tilt speed, Pan/Tilt time
CH6	0-255	Zoom
CH7	0-255	Dimming
CH8	0-255	Strobe
CH9	0-255	Red1 Dimmer
CH10	0-255	Green1 Dimmer
CH11	0-255	Blue1 Dimmer
CH12	0-255	White1 Dimmer
CH13	0-255	Red2 Dimmer
CH14	0-255	Green2 Dimmer
CH15	0-255	Blue2 Dimmer

CH16	0-255	White2 Dimmer
CH17	0-255	Red3 Dimmer
CH18	0-255	Green3 Dimmer
CH19	0-255	Blue3 Dimmer
CH20	0-255	White3 Dimmer
CH21	000-127 128-145 146-159	Preset color Program jump Program gradient
CH22	0-255	Program speed adjustment
CH23	050-099	Activation CH21
	100-150	Self-Propelled Mode (1)
	150-199	Self-Propelled Mode (2)
	200-255	Voice control Mode
CH24	0-255	Reset

**Symbol Instruction on Fixture:**



CE certificate



RoHS certificate



FCC certificate